




# PanDigital®

Visit [www.pandigital.com](http://www.pandigital.com) for more information.


Tech Support or Questions Please Call 1-888-909-7888

#### 4. Power On

Connect power cord to wall outlet and power on the printer

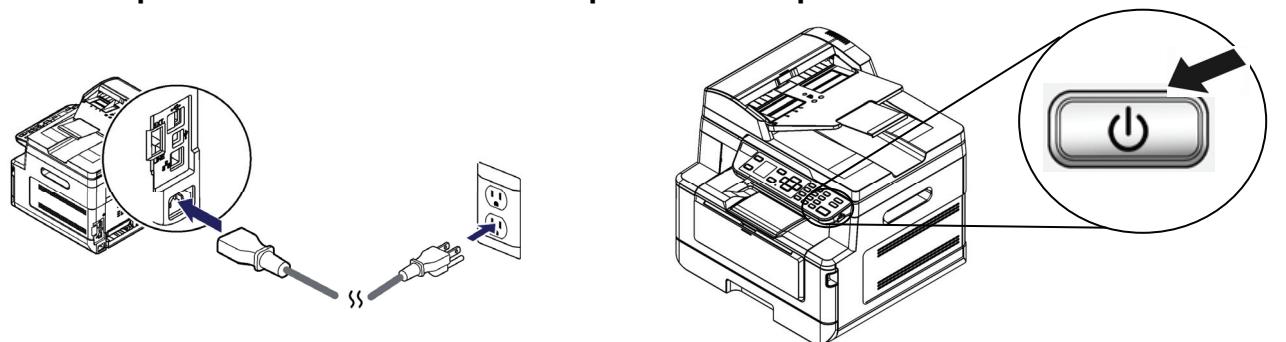


#### 5. Insert the CD to the computer and install the Printer Driver

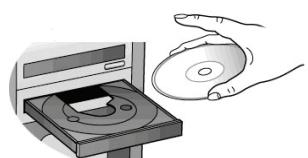

For more information, see the user manual in the CD. If you do not have a CD-ROM, please download the driver from  
[www.pandigital.com/download/](http://www.pandigital.com/download/)


#### 6. Connect to the Computer

Connect to USB

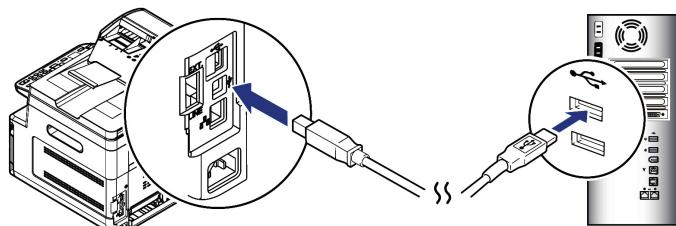

OR


Connect to Network

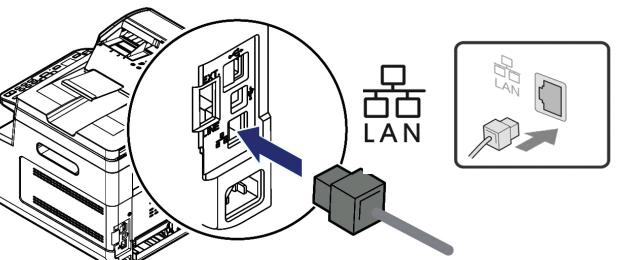

#### How to Print from the Manual Tray

- Pull down the Manual Tray Lever.
- Pull to slide out tray extension.
- Load paper facing down.

Ready to print.

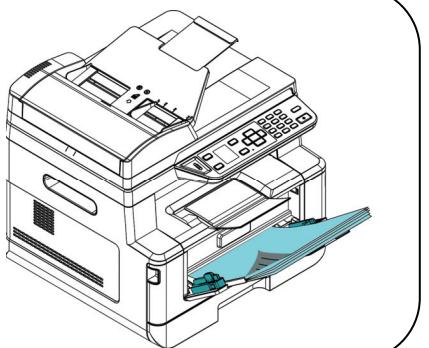


# PanDigital®

## Pandigital M1 Laser Printer


### GETTING STARTED

#### 1. What's in the Box – Printer, USB Cable, CD, Quick Guide, Power Cord

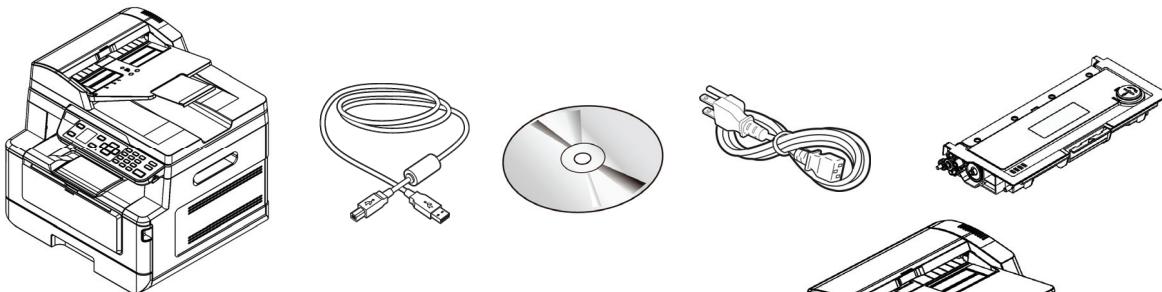


#### 2. Load Paper into Main Paper Tray

##### Step 1. Pull out paper tray

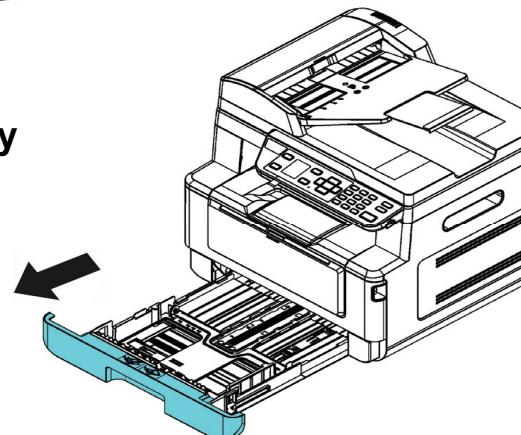


##### Step 2. Adjust paper tray size

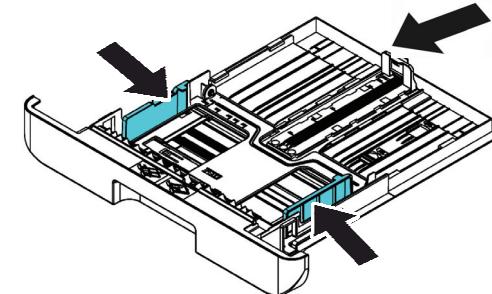


##### Step 3. Insert Paper to the Tray

Push to close tray door

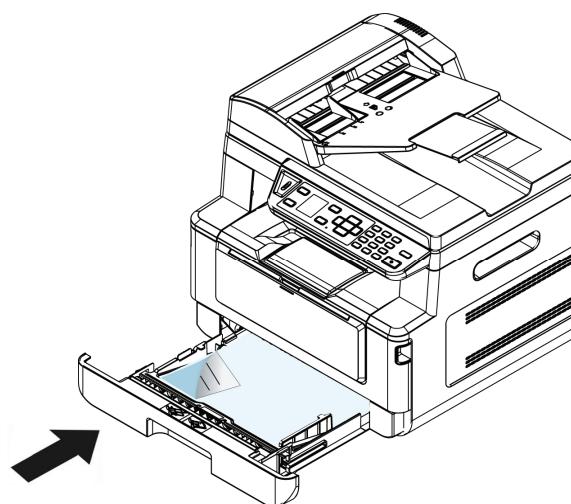


### 3. Install the Toner Cartridge


#### Step 1. Pull Down Lever

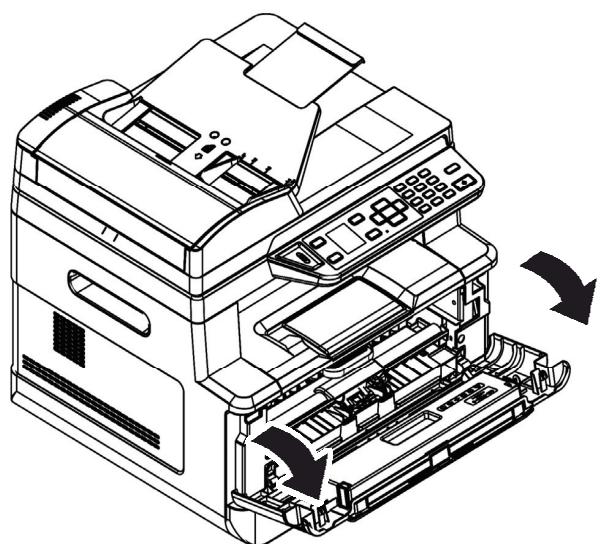

#### Step 2. Push and Lift up the drum tray.

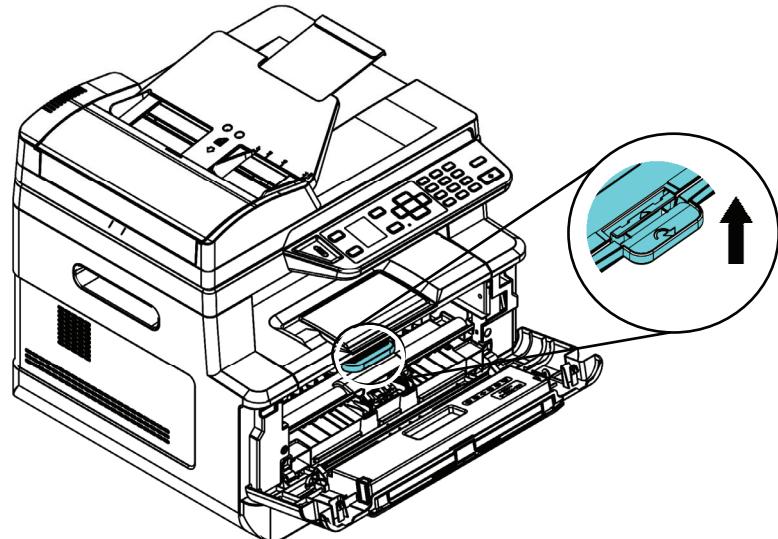


#### Step 3. Pull out the drum, and remove all the tapes on the drum.

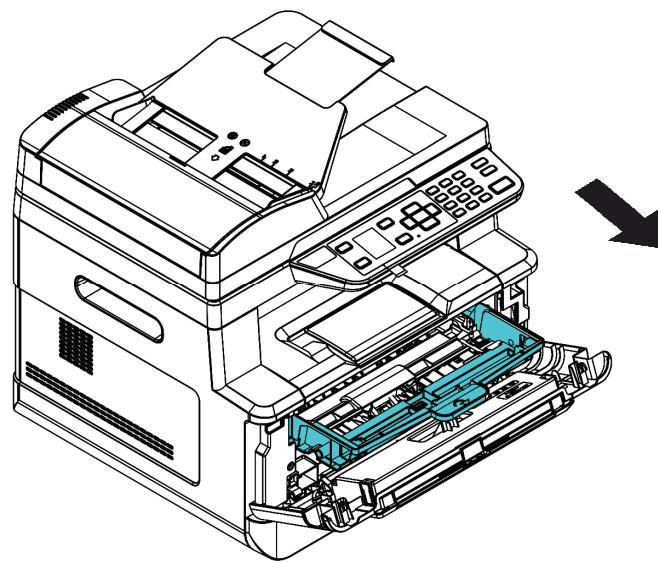


#### Step 4. Remove the toner cartridge from the plastic bag.

Remove all the tapes.

Prepare to insert the toner cartridge  
Into the drum.

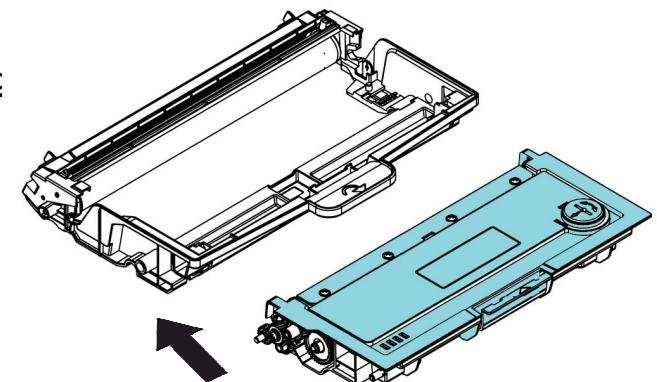



#### Step 5. Tilt the cartridge upward to slide in, push DOWN to snap in.

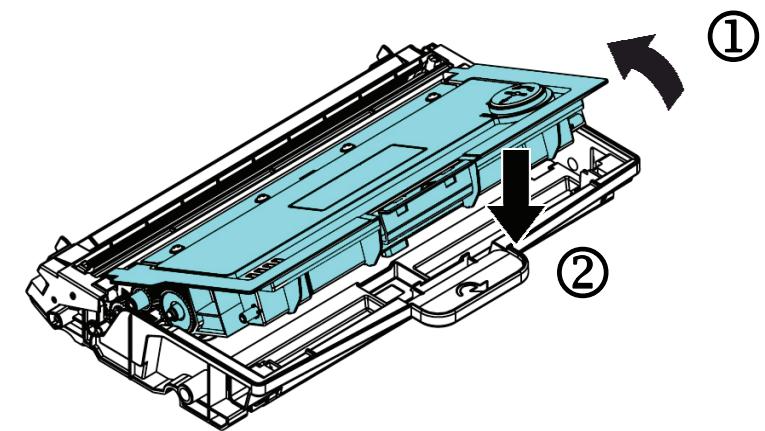

#### Step 6. Insert back the drum tray.

Push IN and DOWN.

Lift up on tray to close door.

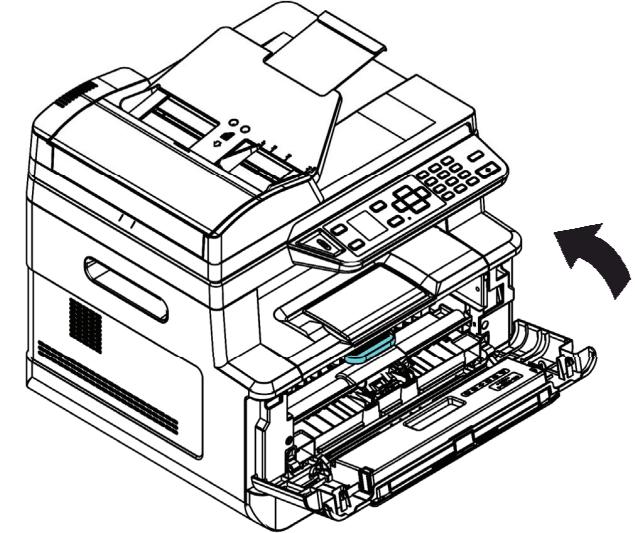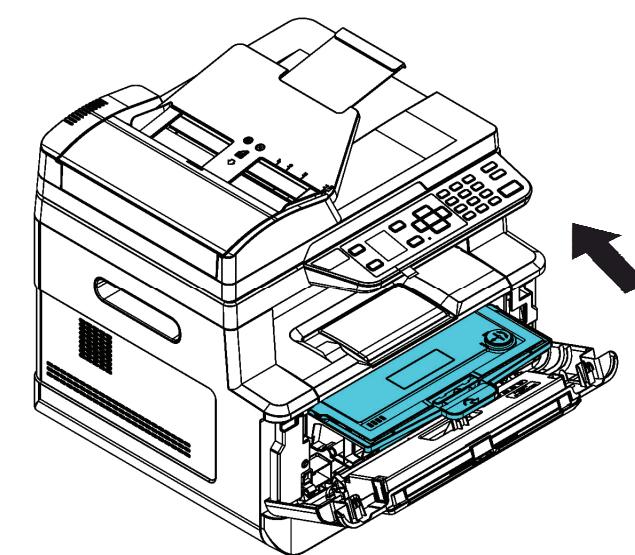

251-1237-0V200